



PARALLEL INSTALLATION  
 EXTENSION-SELECT 3 IN  
 BU25/1+3 SRC17-20  
 BU25/2+4 SRC21-24

EXTENSION-SELECT 3 IN/OUT  
 EXT-SEL2/L-1/0 LEFT  
 BU-N1  
 EXTENSION-SELECT 3 IN/OUT  
 EXT-SEL2/R-1/0 RIGHT  
 BU-N2

IF EXT-SEL3 IS NOT INSTALLED BU-N1/N2 OPERATES AS INPUT FOR MAIN-EXT-SELECT

TB-EXT-MIC-IN  
 TB-EXT1-OUT  
 TB-EXT2-OUT  
 LISTEN-OUT  
 LISTEN-EXT-LINE-IN  
 LISTEN-EXT-MIC-IN  
 OSC-SWITCHED-OUT

TB/LISTEN-AUDIO BU25/5  
 TB/LISTEN-AUDIO  
 TB/LISTEN-CTRL ST25/1  
 TB/LISTEN-CTRL

EXT-LISTEN-CTRL-IN  
 EXT-MIC-CTRL-IN  
 EXT-TB-MIC-CTRL-IN  
 EXT-LISTEN-CTRL-IN  
 LISTEN-CTRL-OUT  
 ON-AIR-RELAIS-OUT  
 DIM-RELAIS-OUT  
 TB-RELAIS-OUT  
 AUTODIM-CTRL-IN  
 ON-AIR-CTRL-IN

Project	BC4	Object	BC-TBO4b	Rev.:	1	Material:	
Customer			Talkback - /Oscillator-Module	Ver.:	2	Surface:	
adT-audio (BS-2J)		Sheet Name	Block-Diagram	Sign:	Jg	Finish:	
BSH				Date:		Cutsize:	
				Upd.:		Marks:	
Dipl.-Ing. Cerd Jüngling, Scholtwiese 4-6, 45966 Gladbeck, Germany, Phone 02049 20 43 51061							

CONTROL-BUSSES AND OUTPUT-RELAYS IN BASIC CONFIGURATION - CUSTOM VERSIONS POSSIBLE