

BC-STU4b

BC4

SEL2

SRC 9 SRC 10 SRC 11 SRC 12 SRC 13 SRC 14 SRC 15 SRC 16

EXTENSION SOURCE

AUX 1 AUX 2 AUX 3 AUX 4

AUTO

SRC-SEL INT-SEL CUE 1 PGM A

CTRL-ROOM FOLLOW

TB-OFF

MONO

CUT

PHONES 1

0 1 2 3 4 5 6 7 8 9 10

MONO

CUT

AUX 1 AUX 2 AUX 3 AUX 4

AUTO

SRC-SEL INT-SEL CUE 1 PGM A

CTRL-ROOM FOLLOW

TB-OFF

MONO

CUT

PHONES 2

0 1 2 3 4 5 6 7 8 9 10

MONO

CUT

AUX 1 AUX 2 AUX 3 AUX 4

AUTO

SRC-SEL INT-SEL CUE 1 PGM A

CTRL-ROOM FOLLOW

TB-OFF

MONO

CUT

PHONES 3

0 1 2 3 4 5 6 7 8 9 10

MONO

CUT

AUX 1 AUX 2 AUX 3 AUX 4

AUTO

SRC-SEL INT-SEL CUE 1 PGM A

CTRL-ROOM FOLLOW

TB-OFF

MONO

DIM

AUTOCUT

CUT

STU SPEAKER

ON VG 3 ON VG 4

dB

10 5 0 5 10 15 20 25 30 40 50 60 85 ∞